


## SUREMARKER MARKER BUOY CLICKER & SHAFT REPLACEMENT INSTRUCTIONS

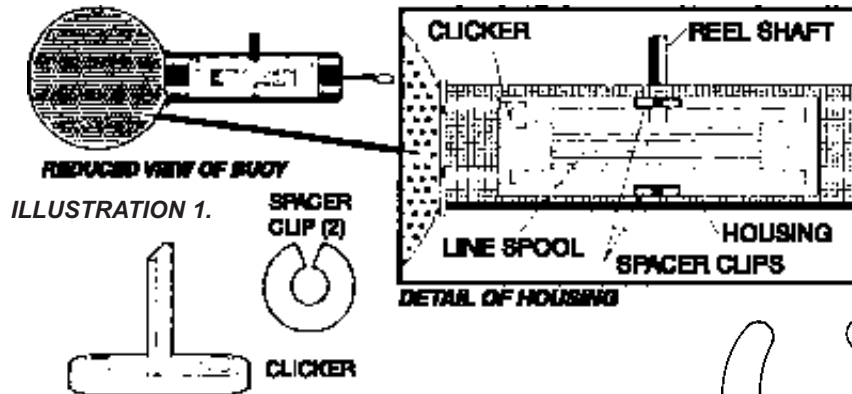

### TOOLS NEEDED:

- 1 FLAT HEAD SCREWDRIVER
- 1 PAIR OF LONG THIN NEEDLE NOSE PLIERS
- 1 PHILLIPS SCREWDRIVER

\*Only follow steps 4 & 5 if have purchased the clicker kit

1. Turn buoy spool housing to view inside (see detail above).
2. Remove SPACER CLIPS (see illustration 1) from each side of the reel shaft, do this one at a time.  
To do this insert long thin pair of needle nose pliers in opening of SPACER CLIP (see illustration 2).  
Apply out and downward pressure with pliers. The SPACER CLIP should pop off. Repeat on other side. SPACER CLIPS MAY FLY AWAY, extra clips provided.
3. Pull out REEL SHAFT and remove LINE SPOOL from HOUSING.
4. \* Remove old CLICKER inside upper part of HOUSING and replace with NEW CLICKER using Phillips screwdriver.
5. \* Replace LINE SPOOL so the CLICKER is on the notched side of spool. INSERT SHAFT into the CLICKER side of HOUSING ONLY.
6. Place SPACER CLIP between pliers with open end over SHAFT between SPOOL and HOUSING. Make sure that grooves of the SHAFT line up to accept CLIP (see illustration 3).
7. While holding SPACER CLIP between pliers with one hand, use flat head screwdriver to pop the CLIP onto the SHAFT (see illustration 4). Repeat on other side, locking the SPOOL to the SHAFT.
8. Your SUREMARKER BUOY is now ready for use.

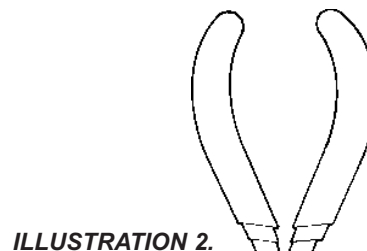


ILLUSTRATION 2.

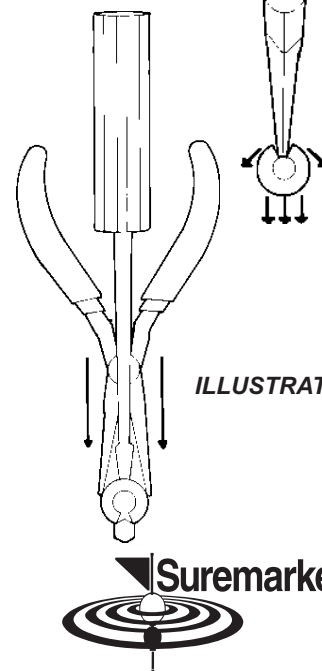


ILLUSTRATION 3.

The World's Finest Portable Marker Buoy.

**Suremarker, LLC.**

8000 Fruitville Road • Sarasota, FL 34240

(941) 379-0533 • [www.suremarker.com](http://www.suremarker.com)